
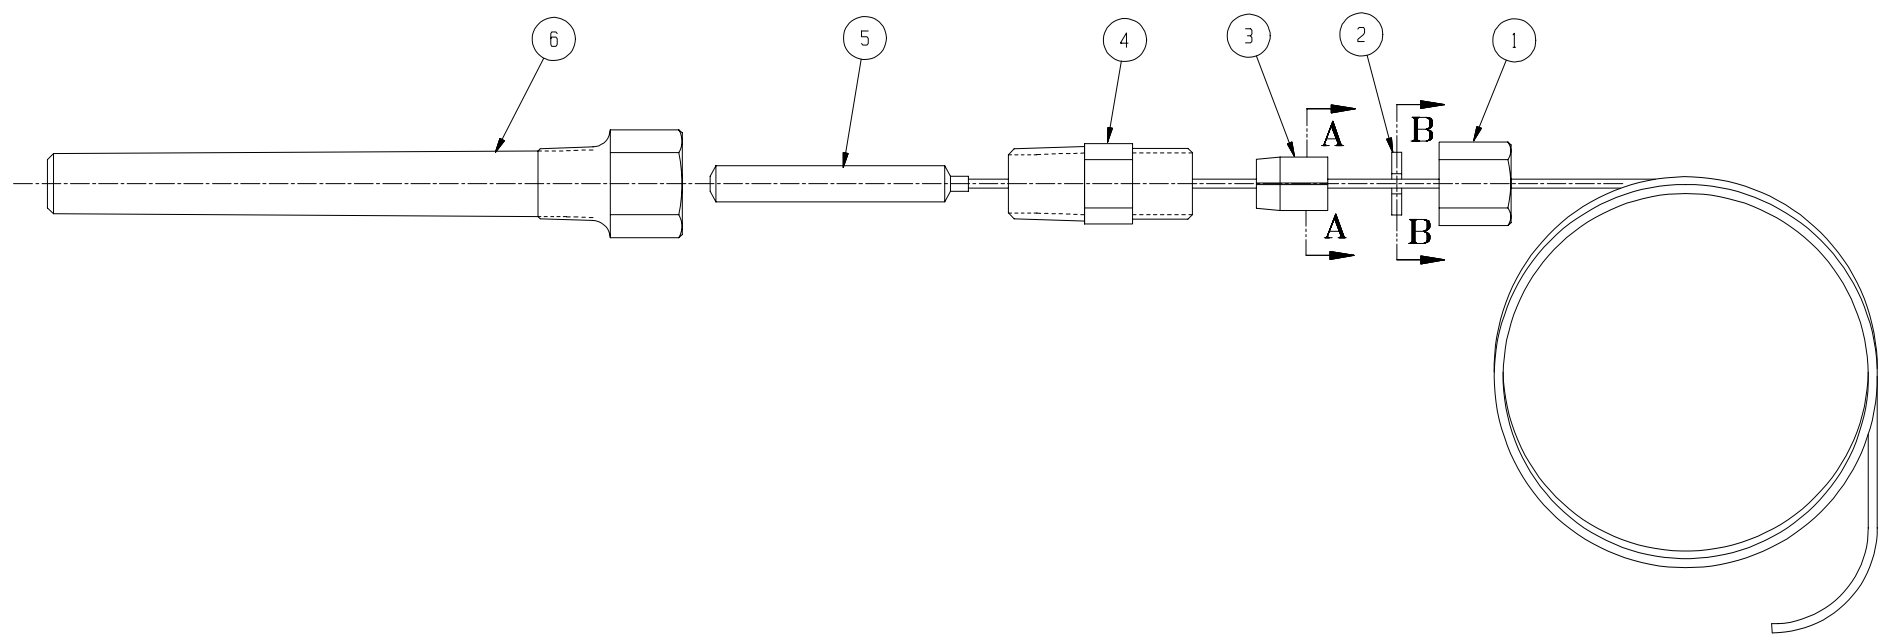
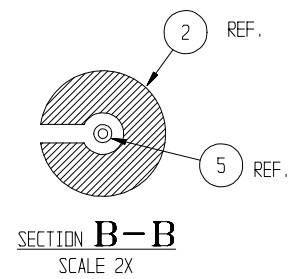


ITEM NO.	QTY.	DESCRIPTION
1	1	JAM - NUT
2	1	WASHER
3	1	SEAL (TEFLON)
4	1	FITTING
5	1	BULB, CAPILLARY
6	1	THERMOWELL

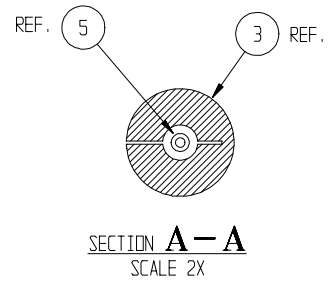

7. BRING ITEMS 1, 2 & 3 TOGETHER AND TIGHTEN NUT (#1) ONTO FITTING (#4).
6. INSERT BULB INTO THERMOWELL MAKING SURE THAT THE BULB BOTTOMS OUT IN THE THERMOWELL.
5. INSTALL FITTING (#4) INTO THERMOWELL.
4. INSERT SPLIT WASHER AS SHOWN (SECTION B-B).
3. LOCATE SPLIT IN TEFLON PLUG SEAL, SPREAD AND WRAP AROUND CAPILLARY (SECTION A-A).
2. SLIDE JAM - NUT (#1) OVER BULB ONTO CAPILLARY.
1. INSTALL THERMOWELL (#6) INTO PROCESS FITTING.

NOTES:

DRAWN RC DATE 6-20-01 CHECKED RAM DATE 6-20-01 APPROVED DATE UNLESS OTHERWISE SPECIFIED DIMENSIONAL TOLERANCES FRACTIONAL ±1/16 DECIMAL ±.010 ANGULAR ±.5° DIMENSIONS IN BOXES ARE IN MILLIMETERS	UNION CONNECTOR ASSEMBLY	NEXT ASSEMBLY REFERENCE DPM DIST. <input type="checkbox"/> GPH	PCD # REV. DATE
Barksdale Barksdale, Inc. Los Angeles, CA		WEIGHT — SCALE FULL DWG. SIZE C	REV. X1 SHEET OF C974656

REV. X1
 C974656
 DWG. C